



OPERATING INSTRUCTIONS

Controls and Their Functions

The unit is equipped with a Membrane Keypad Control Panel. Press button to turn a function ON/OFF; the LED Indicator (where applicable) for the button activates when function is selected.

POWER SWITCH – ON/OFF lighted rocker switch – provides power to the control board.

KETTLE HEAT + MOTOR SWITCH (Heat + Stir Motor) – ON/OFF Button Switch - supplies power to the kettle heating element and stir motor. Stir motor runs for a preset number of seconds each minute (refer to Motor-On-Time in the Configuration section to adjust run time).

It is normal for the stir motor to start/stop each minute (when Motor Only switch is OFF).

MOTOR ONLY (Stir Motor) – ON/OFF button switch - supplies power to the stir motor to run continuously (the switch can be manually turned OFF/ON as needed).

MEMBRANE KEYPAD CONTROL (Digital Display and Programming Buttons) – Controls cooking mode set point temperatures, and motor run time for making Caramel Corn (refer to Configuration section to adjust the presets using UP, DOWN, and SET arrow buttons). Screen has a two-line digital display.

CIRCUIT BREAKER (2410 Series) – Protects the Motor and Heat Control from an overload condition.

KETTLE DUMP HANDLE – Handle tilts kettle from upright cook position, to mix position or dump position. The 2 position bracket holds the handle in the tilted position.

