


ASSEMBLY INSTRUCTIONS FOR 5096 LOW BOY CART

BEFORE 11/1/08

5099NS –
PLACE FRYER ON CART
(HARDWARE NOT REQUIRED)

5094 –
REQUIRES 89969 PLATE
(HARDWARE NOT REQUIRED)
PLATE HAS 4 HOLES FOR FRYER LEGS

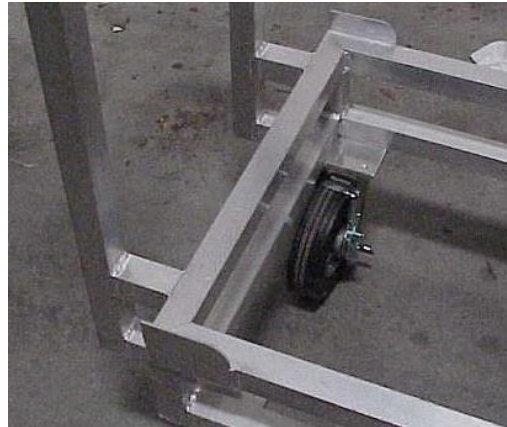

AFTER 11/1/08

5099NS –
UNSCREW 5099NS FRYER LEGS
PLACE FRYER ON CART
LINE UP FRYER WITH HOLES IN CORNER
PLATES SHOWN IN PHOTO
REASSEMBLE FRYER LEGS
THROUGH HOLES IN 4 CORNERS



5094 –
REQUIRES 67911 ADAPTER KIT
KIT INCLUDES:

- ADAPTER PLATE P/N 67909 (HAS 8 HOLES, 4 FOR CART, 4 FOR FRYER)
- (4) 3/8"-16 HEX HEAD BOLTS – P/N 12470
- (4) 3/8"-16 NUTS – P/N 46000
- (8) FENDER WASHERS – P/N 89780

BOLT ADAPTER PLATE TO CART USING THE HARDWARE SUPPLIED
THE ADAPTER PLATE BOLTS THROUGH HOLES SHOWN IN PHOTO ABOVE
UNSCREW LEGS ON 5094 FRYER, PLACE FRYER ON CART
REASSEMBLE FRYER LEGS, THROUGH HOLES IN ADAPTER PLATE

8065NSD –
REQUIRES 115318 ADAPTER KIT
KIT INCLUDES:

- ADAPTER PLATE P/N 115317 (HAS 8 HOLES, 4 FOR CART, 4 FOR FRYER)
- (4) 3/8"-16 HEX HEAD BOLTS – P/N 12470
- (4) 3/8"-16 NUTS – P/N 46000
- (8) FENDER WASHERS – P/N 89780

BOLT ADAPTER PLATE TO CART USING THE HARDWARE SUPPLIED
THE ADAPTER PLATE BOLTS THROUGH HOLES SHOWN IN PHOTO ABOVE
UNSCREW LEGS ON 8065NSD FRYER, PLACE FRYER ON CART
REASSEMBLE FRYER LEGS, THROUGH HOLES IN ADAPTER PLATE